


Walk-Back patterns

Straight vertical Line

Button position and tension correctly set

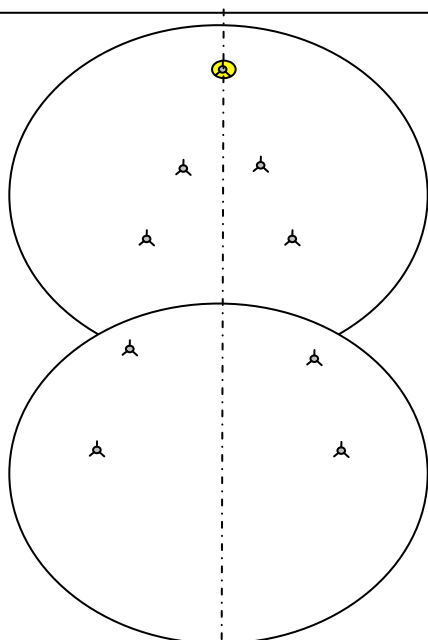

Slope to the Left:


R/H archer: button to stiff; reduce tension.

L/H archer: button to weak; increase tension

Slope to the Right:

R/H archer: button to weak; increase tension

L/H archer: button to stiff; decrease tension

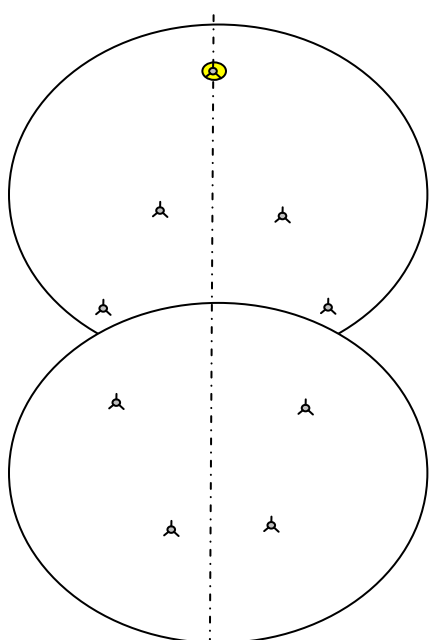

Curve to Left: button too far left.

R/H archer: screw out button

L/H archer: screw in button

Curve to right: button too far right.

R/H archer: screw in button

L/H archer: screw out button